



Getting to Know Your **2016 LaCrosse**



www.buick.com

Review this Quick Reference Guide for an overview of some important features in your Buick LaCrosse. More detailed information can be found in your Owner Manual. Some optional equipment described in this guide may not be included in your vehicle. For easy reference, keep this guide with your Owner Manual in your glove box.

Instrument Panel

Exterior Lamps Control/
Instrument Panel
Illumination Control

Head-Up Display
Controls*
(behind steering wheel)

Driver
Information
Center

Audio Steering Wheel
Controls/Driver
Information Center
Controls

Windshield
Wipers Lever



Storage
Compartment

Cruise Control/Forward Collision
Alert*+/Heated Steering Wheel*+/
Voice Recognition Buttons

Tilt/Telescope
Steering Wheel
Lever

Symbols



Low Fuel



Traction Control Off



Engine Coolant
Temperature



Cruise Control Set



Adaptive Cruise Control



Low Tire Pressure



StabiliTrak Active



StabiliTrak Off



Security



Check Engine



Oil Pressure

Lane Departure
Warning Button♦

Hazard Warning
Flashers Button

Ultrasonic Park
Assist Button♦

Infotainment
System



Climate Controls/
Driver's Heated/
Ventilated Seat
Controls♦

Climate
Controls


Accessory Power
Outlet (in storage
compartment)

Climate Controls/
Passenger's
Heated/Ventilated
Seat Controls♦

BRAKE Brake System

 Charging System

 Safety Belt Reminder

 Airbag Readiness

 Antilock Brake System

 Lane Change Alert/
Side Blind Zone Alert

 Lane Departure
Warning

Refer to your Owner Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.

See In Brief in your Owner Manual.

♦ *Optional equipment*

Remote Keyless Entry Transmitter (Key Fob)

Unlock

Press to unlock the driver's door.
Press again to unlock all doors.

Lock

Press to lock all doors. The driver's door will not lock when open if the Unlocked Door Anti Lock Out feature is turned on. See the Vehicle Settings menu.

Vehicle Locator/ Panic Alarm

Press and release to locate your vehicle. The turn signal lamps will flash and the horn will sound.

Press and hold to activate the alarm. The turn signal lamps will flash and the horn will sound until the button is pressed again or the ignition is turned on.


Trunk Release

Press and hold to unlock the trunk.



Remote Vehicle Start*

Press and release the  **Lock** button and then press and hold the  button until the turn signal lamps flash to start the engine from outside the vehicle. After entering the vehicle, turn on the ignition using the key or **ENGINE STOP/START** button[†].

- During a remote start, the engine will run for 10 minutes.
- Press and hold the  button until the parking lamps turn off to cancel a remote start.



Note: To change the remote lock, unlock, and remote start settings, go to Remote Lock, Unlock, Start in the Vehicle Settings menu.

If the remote start heated seat option is selected, the heated seat button indicators will not illuminate and the temperature of the unoccupied heated seat may be reduced during the remote start. The heated seat turns off when the ignition is turned on.

See Keys, Doors and Windows in your Owner Manual.

Door Locks/Trunk Release



Door Locks

- ▶ To lock or unlock all doors, press the power door  **Lock**/ **Unlock** button, located on the interior panels of the front doors.

Note: To change the lock and unlock setting, go to Power Door Locks in the Vehicle Settings menu.

- ▶ To open a locked door from inside, pull the inside door handle to unlock the door and then pull the door handle again to open the door.

Trunk Release

- ▶ To open the trunk, with the vehicle unlocked, press the  **Trunk Release** button on the driver's door, press the touchpad[†] above the license plate or use the  **HOLD Trunk Release** button on the key fob.

See Keys, Doors and Windows in your Owner Manual.

Keyless Access System♦

The Keyless Access System enables operation of the doors and ignition without removing the key fob from a pocket or purse. The key fob must be within three feet of the door being unlocked or the trunk.

Keyless Unlocking

With the key fob within range:

- ▶ Press the lock button on the driver's door handle to unlock the driver's door; press it again within five seconds to unlock all doors.
- ▶ Press the lock button on a passenger door handle to unlock all doors.
- ▶ Press the touchpad above the license plate to open the trunk.



2015 model shown

Keyless Locking

With the ignition off, the key fob out of the vehicle, and all doors closed:

- ▶ Press the lock button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on, all doors will lock automatically after a short delay once all doors are closed.

Note: To change the door lock and unlock settings, go to Remote Lock, Unlock, Start in the Vehicle Settings menu.

See Keys, Doors and Windows in your Owner Manual.

Keyless Access Start♦

Starting the Engine

- ▶ With the vehicle in Park or Neutral, press the brake pedal and then press and hold the **ENGINE START/STOP** button to start the engine.

Note: The key fob must be in the vehicle to turn on the ignition. If the key fob battery is weak, place the key fob in the pocket in the center console storage compartment to enable the engine to start. Replace the key fob battery as soon as possible.



Stopping the Engine


- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine.

Accessory

- ▶ With the engine off and the brake pedal not applied, press the **ENGINE START/STOP** button to place the ignition system in the accessory position.

See Driving and Operating in your Owner Manual.

Power Seat Adjustment

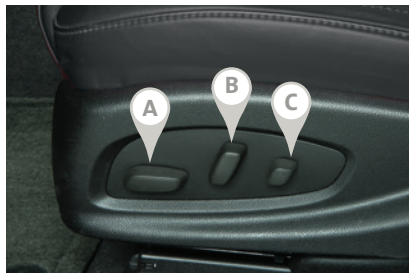

A. Seat Adjustment

Move the front horizontal control to move the seat forward or rearward, or to tilt, raise or lower the seat.

B. Seatback Recline Adjustment

Move the vertical control to recline or raise the seatback.

C. 4-way Lumbar Adjustment (Driver's Seat Only)

Move the rear control to adjust the lumbar support.

Head Restraint Adjustment

The head restraints for the driver and front passenger are adjustable.

- ▶ To adjust the head restraint up, down, forward or rearward, press the button on the side of the head restraint and move the head restraint to the desired position. Release the button.

Set Memory Positions

1. Adjust the driver's seat and power outside mirrors to the desired positions.
2. Press and release the **SET** button on the driver's door. A beep will sound. Immediately press and hold button **1** until two beeps sound.
3. Repeat the steps using button **2** for a second driver.

Recall Positions

- ▶ Press and hold button **1** or **2** or the **Exit** button on the driver's door until the stored position is reached. Releasing the button before the stored position is reached cancels the recall.


Note: To change the memory recall settings, go to *Comfort and Convenience in the Vehicle Settings menu*.

Easy Exit Seat

Automatically move the seat rearward by turning on the Easy Exit feature. See the Vehicle Settings menu.

See Seats and Restraints in your Owner Manual.

Climate Controls

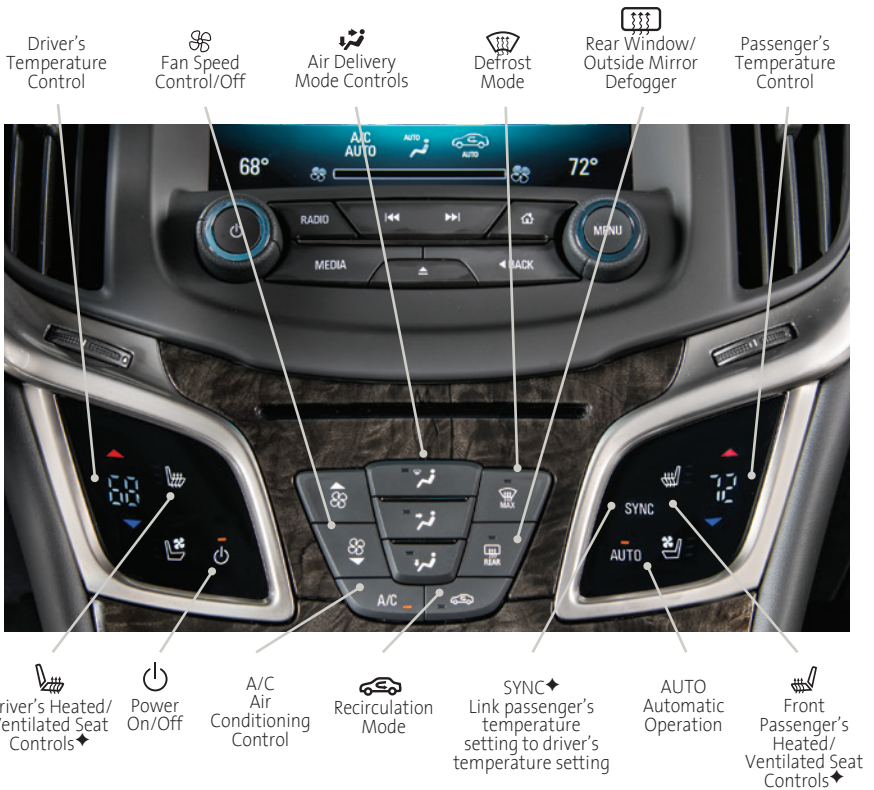

Automatic Operation

1. Press **AUTO**.
2. Set the temperature for the driver and front passenger. The system automatically controls the fan speed, air delivery, air conditioning and recirculation to reach the set temperature. Allow time for the system to reach the desired temperature.

If the air delivery mode or fan speed is manually adjusted, automatic operation is turned off.

Note: When the recirculation mode is used without air conditioning, the air humidity increases and the windows may fog.

See Climate Controls in your Owner Manual.

Infotainment System

Refer to your Owner Manual for important safety information about using the infotainment system while driving.

The infotainment system controls include the audio system buttons and touch screen.



See your Infotainment System Owner Manual.

Infotainment System

Setting the Time

1. Touch **Settings** on the home page.
2. Touch **Time and Date**.
3. Touch **Set Time**.
4. Touch the arrows to adjust the hours, minutes and AM or PM.
5. Touch **◀BACK** to exit the menu.

Storing Favorites

Up to 60 radio stations from all bands (AM, FM or XM[◆]), media (song, artist, album, and genre), phone contacts and navigation destinations[◆] can be stored in any order.

1. Display the desired radio station, media favorite, contact or destination.
2. Touch and drag up the **Interaction Selector** at the bottom of the screen to display the favorite screen buttons.
3. Touch and hold one of the favorite screen buttons until a beep is heard.
4. Repeat the steps to store another favorite item.

Note: To change the number of favorites displayed, go to **Radio > Manage Favorites** in the **Vehicle Settings** menu.

SiriusXM™ Satellite Radio[◆] (Subscription required)

SiriusXM provides access to over 180 channels of commercial-free music, sports, talk, entertainment, comedy and weather using the radio controls or voice commands.

- XM Tune Select finds your favorite artists or songs on all XM stations and alerts you.
- XM Travel Link includes weather and other travel information. Additional subscription fee required.

Portable Audio Devices



Note: Connect an iPod/iPhone USB cord after starting the vehicle for optimum performance.

Two USB ports and an auxiliary input jack are located in the center console.

- ▶ An iPod®, iPhone®, MP3 Player, a USB flash drive or a USB mass storage device can be connected to the USB port. Search for music on-screen or by voice commands.
- ▶ Press the **MEDIA** button to select a portable device as the audio source.


See your Infotainment System Owner Manual.

IntelliLink System

IntelliLink uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone, cell phone, USB flash drive or portable audio player/iPod®. IntelliLink enables streaming audio through a smartphone and hands-free voice control. For assistance with the IntelliLink system, contact Customer Assistance at 1-855-4-SUPPORT (855-478-7767) or go to **www.buick.com** and click the Owners link.

Natural Voice Recognition

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the natural voice recognition system.


1. Press the  **Push to Talk** button on the steering wheel.
2. The radio will say “Say a command,” followed by a beep.
3. After the beep, say what you want it to do.
 - Example Phone command (using your paired phone): “Call Amanda” or “Dial 555-1212”
 - Example Media Music Device Search command (when connected to USB only): “Play artist [name]” or “Play song [name]”
 - Example Radio command: “Tune FM 104.3” or “Tune XM Classic Vinyl”
 - Help: Say “help” for voice recognition assistance


PANDORA® Internet Radio

Listen to personalized radio stations based on favorite artists or genres.

- ▶ Download the latest Pandora app to your smartphone. Restart the smartphone and sign in to Pandora.
- ▶ Create a station on your smartphone to listen to a customized song list in the vehicle.
- ▶ Connect your smartphone to the system by Bluetooth or, for Apple devices, by a USB cable.
- ▶ Touch the **Pandora** icon on the touch screen to access Pandora. A slight delay may occur when loading a song or changing a station.

Apple CarPlay™ and Android Auto™*

Apple CarPlay or Android Auto capability may be available through a compatible smartphone. If available, a  Projection icon will appear on the home page of the infotainment display.

1. No app is required for Apple CarPlay. Download the Android Auto app to your phone from the Google Play store.
2. Connect your Apple iPhone or Android phone by plugging the compatible phone USB cable into a USB data port. Use your device's factory-provided USB cable. Aftermarket cables may not work.
3. The  Projection icon will change to Apple CarPlay or Android Auto, depending on the phone. Apple CarPlay or Android Auto may launch automatically upon USB connection. If not, touch the Apple CarPlay or Android Auto icon on the home page.

For more information on using Apple CarPlay or Android Auto, call 1-855-4-SUPPORT (1-855-478-7767) or visit **my.buick.com/learn**.

See your Infotainment System Owner Manual.

Audio Steering Wheel Controls





+ - Volume

Press up or down to adjust the volume.

Next/Previous

Press  to go to the next or previous radio station, track, or file.

Push to Talk

Press to answer an incoming call or to interact with the audio, Bluetooth, navigation  or OnStar  system.

End Call/Mute

Press to end or reject a call.


Press to mute the vehicle speakers.

See your Infotainment System Owner Manual.

Bluetooth® System

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. Not all devices will support all functions. The pairing process is disabled when the vehicle is moving. For more information, visit my.buick.com/learn.

Pair a Phone

1. To use voice recognition, press the  **Push to Talk** button; after the beep, say “Pair,” or Use the **MENU** knob or the touch screen to select the Phone icon > Phones > Pair Device.
2. Start the pairing process on the phone. Locate your vehicle name or IntelliLink on the phone.
3. Enter the four-digit code that appears on the touch screen into the phone or, if a six-digit code appears on the phone, confirm it on the touch screen.
4. If your phone prompts you to accept the connection or phone book download, select Always Accept and Allow.



Streaming Audio

With a paired device connected via Bluetooth, select Bluetooth Audio on the touch screen home page to stream audio from the device. Control audio operation using the device controls.

See your Infotainment System Owner Manual.

OnStar® with 4G LTE

With OnStar 4G LTE and Wi-Fi®, up to seven devices (smartphones, tablets and laptops) can be connected to high-speed Internet through the vehicle's built-in Wi-Fi hotspot.

- ▶ To retrieve the SSID and password for the hotspot, press the OnStar Voice Command button on the overhead console or rearview mirror, wait for the prompt, and then say "Wi-Fi settings." The information will be displayed on the touch screen.

For assistance, press the blue OnStar button or call 1-888-4-ONSTAR (1-888-466-7827).

Note: See onstar.com for a detailed instruction guide, vehicle availability and system limitations.

See *OnStar in your Owner Manual*.

Navigation System◆

Refer to your Owner Manual for important safety information about using the navigation system while driving.

- ▶ Touch the Navigation icon on the home page to access the navigation functions.



Entering a Destination

Destinations can be entered by Voice Recognition, Address, Recent Destination, Contacts and Places of Interest (POI).

To enter a destination using the single line destination feature:

1. Touch **Navigation** on the home page.
2. Touch **Destination**.
3. To enter a specific address, type the address, intersection or road.
4. Touch **Go**.
5. Select the desired name from the generated list.
6. Touch **Go**.

To enter a destination using voice recognition:

1. Press the **Push to Talk** button.
2. Say "Destination address" to enter specific destination information.
3. Say the address or other destination information.



See your *Infotainment System Owner Manual*.

Vehicle Personalization

Some vehicle features can be customized using the audio controls and touch screen menus.



Changing Vehicle Settings

The Vehicle Settings menus may include Climate and Air Quality, Collision/ Detection Systems, Comfort and Convenience, Lighting, Power Door Locks, or Remote Lock/Unlock/Start.

Use the MENU knob or the touch screen to:

1. Select **Settings** on the home page.
2. Select **Vehicle**.
3. Select the desired menu item.
4. Select the desired feature and setting. Settings are saved automatically.
5. Touch **BACK** to exit each menu.



See Instruments and Controls in your Owner Manual.

Driver Information Center

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle system information and warning messages.



Menu Items

Use the controls on the right side of the steering wheel to view the Info (includes the trip odometers and fuel information), Audio, Phone, Navigation, and Settings menus.

- ▶ Press the < or > button to move between the display zones.
- ▶ Press the ^ or v button to move through the displayed menu or submenu.
- ▶ Press ✓ to open a menu or select/deselect a setting.

Reset an Item

1. Use the controls to display the item.
2. Press and hold ✓ to reset or clear the item.

Reconfigurable Instrument Cluster

1. Use the controls to display the Settings menu.
2. Select Display Theme.
3. Select the desired cluster theme.

See Instruments and Controls in your Owner Manual.

Electric Parking Brake




- ▶ To apply the parking brake, pull up the (P) **Parking Brake** switch by the shift lever.
- ▶ To release the parking brake, turn on the vehicle ignition, press the brake pedal and press down the (P) switch.

See Driving and Operating in your Owner Manual.

Lighting

Exterior Lights

Rotate the knob to activate the exterior lights.

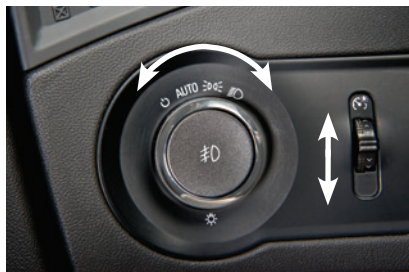

 **Off/On**

AUTO Automatic Headlamp System

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions.

 **Parking Lamps**

 **Headlamps**

 **Fog Lamps** 

Press to turn the fog lamps on or off.

Instrument Panel Lighting

 **Instrument Panel Brightness**

Rotate and hold the thumbwheel to adjust the instrument panel lighting.

See Lighting in your Owner Manual.

Wipers and Washers

Move the lever to activate the wipers.



HI Fast Wipes

LO Slow Wipes

 **INT Intermittent**

Rotate the band up for more frequent wipes or down for less frequent wipes.

OFF

1x Mist

Single wipe.

 **Washer Fluid**

Pull the lever toward you to spray washer fluid on the windshield.

See Instruments and Controls in your Owner Manual.

Cruise Control



Setting Cruise Control

1. Press the **On/Off** button (or **Adaptive Cruise Control+** button, if equipped). The Cruise Control symbol will illuminate in white on the instrument cluster.
2. When traveling at the desired speed, press the switch down to the **SET-** position to set the speed. The symbol will illuminate in green on the instrument cluster.

Adjusting Cruise Control

RES+ Resume/Accelerate

Press up to resume a set speed. When the system is active, press up to increase speed.

SET- Set/Coast

When the system is active, press down to decrease speed.

Follow Distance Gap (Adaptive Cruise Control+ only)

Press to select a setting of Far, Medium, or Near. This setting is also the setting for the Forward Collision Alert timing.

Cancel

Press to cancel the cruise control without erasing the set speed from memory.

Pressing the brake pedal also will cancel the cruise control.

The cruise control set speed is erased when cruise control or the vehicle ignition is turned off.

See Driving and Operating in your Owner Manual.

StabiliTrak/Traction Control Systems

The traction control system limits wheelspin and the StabiliTrak stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started.



Turning Off Traction Control

Traction control should be turned off if the vehicle is stuck and rocking the vehicle is required.



- ▶ Press the **StabiliTrak/Traction Control** button. The Traction Control Off light will illuminate in the instrument cluster. Press the button again to turn on the system.

See Driving and Operating in your Owner Manual.


Driver Assistance Systems

The driver assistance systems use advanced technologies to help avoid collisions by providing visual and audible alerts under some imminent collision conditions.


Forward Collision Alert* – When approaching a vehicle directly ahead too quickly, the system flashes a visual alert and pulses the Safety Alert Seat*. See Safety Alert Seat.

- ▶ To set the alert timing to Far, Medium, or Near, press the  **Collision Alert** button or the  **Follow Distance Gap** button on the left side of the steering wheel.

Lane Departure Warning* – When crossing a detected lane marking without using a turn signal, the system flashes a visual alert and pulses the left or right side of the Safety Alert Seat*. See Safety Alert Seat.

- ▶ To turn the system on or off, press the  **Lane Departure Warning** button on the center of the instrument panel.



Side Blind Zone Alert/Lane Change Alert* – While driving, the Side Blind Zone Alert/Lane Change Alert displays a  warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area or rapidly approaching that side blind zone area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected.

- ▶ To turn the system on or off, go to Collision/Detection Systems > Side Blind Zone Alert in the Vehicle Settings menu.

Rear Parking Assist* – During low-speed parking maneuvers, the Rear Parking Assist system displays a caution symbol on the Rear Vision Camera when an object is detected. One beep sounds or the Safety Alert Seat pulses when an object is first detected and five beeps sound or the Safety Alert Seat pulses when an object is very close.

- ▶ To turn the system on or off, press the  **Parking Assist** button on the center of the instrument panel.

Safety Alert Seat* – Subtle driver's seat pulses, left or right, or simultaneously, alert the driver of potential hazards.

- ▶ Audible notification may be selected instead of Safety Alert Seat pulsing notification. To change the alert setting, go to Collision/Detection Systems > Safety Alert Seat in the Vehicle Settings menu.

See Driving and Operating in your Owner Manual.

eAssist Overview (if equipped)

A compact electric assist system called eAssist has been integrated with the highly efficient 2.4-liter four-cylinder engine and six-speed automatic transmission to provide an electric “boost” to help conserve fuel. eAssist includes a small, but powerful, electric motor rated at 15 kilowatts. It replaces the typical alternator found on most engines. eAssist also uses a small, advanced 115-volt lithium-ion battery located in the trunk.

eAssist Features

Auto Start/Stop

While driving, when the brake is applied and the vehicle comes to a complete stop, the automatic engine start/stop system may turn off the engine, referred to as an Auto Stop. In Auto Stop mode, the tachometer gauge will read AUTO STOP. The audio system, climate controls and other accessories will be powered by the high-voltage battery. The engine will restart immediately when the brake pedal is released or the accelerator pedal is applied.

After parking the vehicle and turning off the engine, the tachometer gauge will read OFF. There are several conditions that may cause the engine to remain running or restart when the vehicle is stopped.

- The engine, transmission or high-voltage battery is not at the required operating temperature.
- The outside temperature is less than -4°F (-20°C).
- The shift lever is in any gear other than Drive (D).
- The high-voltage battery state of charge is low. It will automatically recharge as the vehicle is driven.
- The climate control system requires the engine to run based on the climate control or defog setting. Using the eco Air Conditioning mode will result in more frequent and longer Auto Stops than the Comfort Air Conditioning mode.
- The Auto Stop time is greater than two minutes.

See Driving and Operating in your Owner Manual.

Power Flow Display

The Power Flow display, located on the infotainment system touch screen, indicates the current eAssist operating mode, energy flow direction and high voltage battery charge level. The operating modes include Engine Idle, Auto Stop, Engine Power, Hybrid Power, and Regen Recovery.

See Instruments and Controls in your Owner Manual.

eAssist Features

Driver Efficiency Gauge

The driver efficiency gauge, located on the instrument cluster, assists you in driving efficiently. To maximize efficiency, attempt to keep the pointer in the solid green zone in the middle of the gauge. The gauge moves down when braking and up when accelerating or driving at high speeds. When driving aggressively, it is less efficient and the gauge will move farther away from center. The eAssist system's ability to capture energy while the vehicle is slowing down makes decelerating important for vehicle efficiency.

See Instruments and Controls in your Owner Manual.

Climate Control Settings

Select the eco Air Conditioning setting (green A/C indicator) for maximum efficiency. This setting will maximize the frequency and duration of Auto Stops while still providing cabin comfort when the vehicle is in an Auto Stop. To further maximize efficiency, operate the climate controls in the Automatic mode at the highest comfortable temperature setting or turn off the air conditioning system when climate conditions allow.

Select the comfort Air Conditioning setting (amber A/C indicator) for maximum cabin comfort. Auto Stops will be reduced in both frequency and duration.

See Climate Controls in your Owner Manual.

Regenerative Braking

When braking or coasting, the electric motor acts like a generator to charge the high-voltage battery. This “regenerative braking” process captures kinetic energy that would otherwise be lost and stores it in the high-voltage battery. This electrical energy can then be reused.

Note: *Capturing kinetic energy causes transmission shifts that have more feel when braking or coasting.*

See In Brief in your Owner Manual.

Next Generation Transmission

The eAssist system employs a next generation six-speed transmission with sophisticated algorithms that continuously store information about your driving style, such as acceleration and braking. Over the first 250–400 miles, some transmission shifts may be more noticeable. As the vehicle is driven in a variety of city and highway driving conditions, eAssist will use its onboard processing power to quickly “learn” your driving habits and deliver a seamless driving experience.

See Driving and Operating in your Owner Manual.

Hill Start Assist

After stopping on an incline, the Hill Start Assist feature momentarily holds the vehicle when the brake pedal is released. The driver-applied brake pressure is used during the stop to keep the vehicle from rolling during the period between when the brake pedal is released and the accelerator pedal is applied.

See Driving and Operating in your Owner Manual.

Roadside Assistance

1-800-252-1112

TTY Users: 1-888-889-2438

As the owner of a new Buick, your vehicle is automatically enrolled in the Buick Roadside Assistance program for 6 years/70,000 miles, whichever occurs first, at no expense to you. Buick's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest Buick dealer.

Roadside Assistance and OnStar

If you have a current OnStar subscription, press the OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

myBuick and OnStar® Mobile Apps



The myBuick and OnStar RemoteLink mobile apps connect owners to a variety of vehicle information and services, such as a searchable Owner Manual, real-time fuel information and Roadside Assistance, as well as enabling users to perform Remote Keyless Entry transmitter commands, including locking and unlocking the doors and starting the vehicle.



An active OnStar account is required to use the OnStar mobile app. Download the mobile apps from your compatible device's app store. To learn more about OnStar services, press the OnStar button, refer to your owner manual, call 1-888-466-7827 or visit **onstar.com**.

Buick Owner Center

The Buick Owner Center, a complimentary service for Buick owners, is a one-stop resource designed to enhance your ownership experience. Exclusive member benefits include online service reminders, vehicle maintenance tips, online owner manual, special privileges and more. Sign up today at **my.buick.com**.

We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2015 General Motors. All rights reserved.



23180151 A